

CAUTION IN USE

As flammable fuel is used in lighter, please pay special attention to the following points

WARNING



Keep the lighter out of reach of children



Keep the lighter away from any open flame when refilling



Keep the lighter away from fire, heat or sunlight exceeding 50°C



Do not put the lighter into open fire.

- When igniting keep the lighter away from your face or clothes
- Use the lighter only for igniting cigarettes and ensure that the lighter is extinguished after use
- After refuelling please ensure before igniting the lighter that the adjuster screw is returned towards the minus (-) position and turn towards the plus (+) position gradually for suitable flame height.
- Do not touch the combustion part directly as this is of delicate structure and finely adjusted.
- Contains flammable gas under pressure
- Extreme heat is present above the visible flame, extra care should be taken to prevent burn injury or fire
- Do not keep lit for more than 10 seconds




After refilling ensure clothes and hands are completely wiped and dried of lighter fluid.



INSTRUCTIONS

Windmill
JAPAN

DELTA

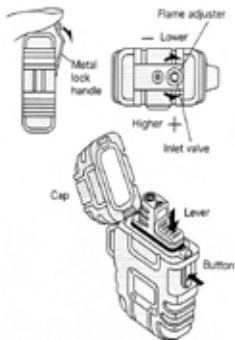

Since this lighter is wholly covered by plastic rubber protector, this is, as it were, a shock-proof lighter giving no effect to it even if you drop it on the floor as long as it is locked by means of the metal lock handle.

After actuating the lighter for ignition, never fail to close the metal lock handle completely.

■IGNITION

Open the cap by pushing the side switch (marked PUSH) and then push down the ignition lever (trigger) on the top mechanism until you hear a click.

■EXTINGUISH

Take finger off from the ignition lever for return lever and extinguish automatically. Cap must be closed firmly and locked after use, or otherwise will lose the waterproof effects.

■FLAME ADJUSTMENT

Flame adjustment for running gas volume should be done with adjusting screw on the bottom of the lighter. Turn the screw in the direction of (+) mark for a stronger flame and turn it in the direction of (-) mark for a weaker flame.

Please use the lighter with an ideal gas supply, referring to the following condition of catalyzer wire as sketched below.



■GAS REFILL

Please fix the lighter in one hand holding it upside down. Firmly grip a gas refill and apply the tip or refill stem to the inlet valve of the lighter. Strongly keep pushing the refill for 2 to 3 seconds, and gas refilling is over.

NB: Use only high quality butane gas

